

GSIMedia

More detailed instructions

<http://www.gsi-media.com>

International Organization
for Standardization Certified



GLSA



GSIMedia
www.gsi-media.com

Global Patent, Counterfeiting Prohibited,
Legal liability executed by Global Legal Service Alliance (GLSA)

GSIMedia®

Android User Guide Version

Table of Contents

- ▶ System Requirements 03
- ▶ Software Installation 04
- ▶ Setting SD card 05
- ▶ APP installation guide 09

【1】 Open and play Movies

- 1-1. Main Menu 11
- 1-2. Features Introduction 13

【2】 Open and play Music Files

- 2-1. Main Menu 15
- 2-2. User Interfaces Features 17

【3】 Open and play Karaoke Files

- 3-1. Main Menu 21
- 3-2. User Interfaces Features 23

System Requirements

Before installation, please check that the system environment meets the following requirements.

Android

- ▶ **Operation system** | Above Android 3.0
- ▶ **RAM** | At least 512MB and above is recommended
- ▶ **Display Resolutions** | 320 x 480 and above

Software Installation

There are two different ways to get GSiMedia installed on your system.

- ▶ **Setting SD Card** | The software from SD card will detect your phone, then install and run the program.
- ▶ **APP Download** | software download from Google Playstore



Google Play Store

Setting SD card


▶ Step 1

Navigate to **Settings**



▶ Step 2



Enable the
Unknown Sources Option ^{*Note 1,2}

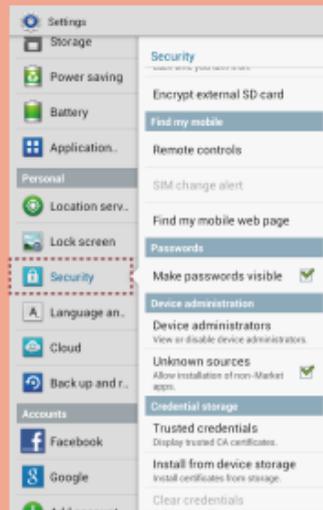

*Note 1: to install the app outside of Google Play Store on your phone.


And check the box marked **"Unknown Sources"**.

*Note 2: Note that where the option appears in the setting page depends on the layout on the layout manager that option is defined to have, such as **"Applications"**, **"Privacy"** or **"Security"** as below:

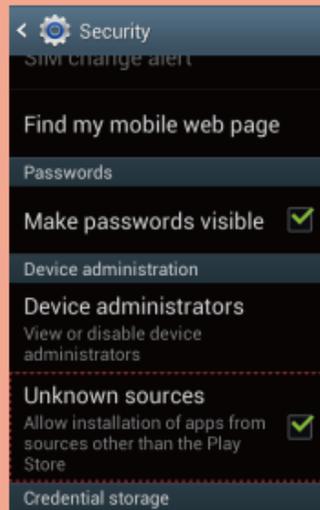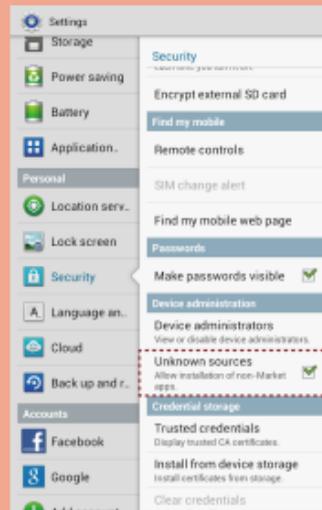

▶ Step 3

Open the **File Manager** ^{*Note 3}, from "Document" navigate to "external sd card" folder, then find **GSiMedia .apk** application.

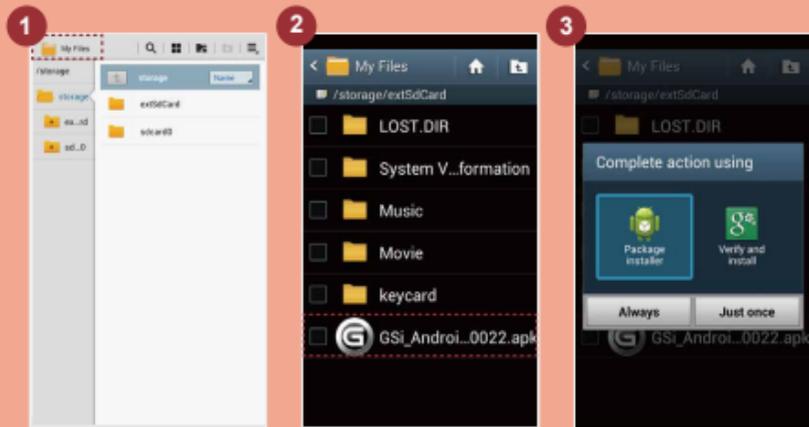

Note 3: some mobile devices lack of File Manager program, so please go to Google Play Store to download "File Manger", such as: **Astro File Manager, FileGO or Es File Manager**

▶ Step 4


GSiMedia.apk installed and then open it. Welcome to use **GSiMedia app**.



APP installation guide


▶ Step 1

Open the **Internet Connection**, then enable the **Google Play Store**.

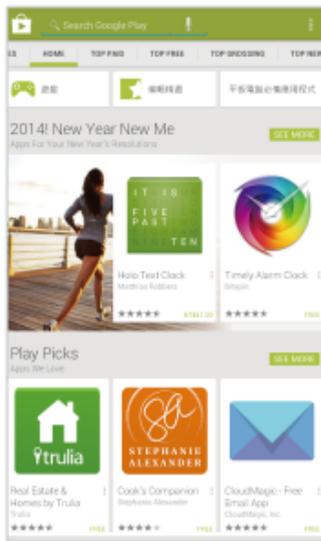

▶ Step 2

Search **GSiMedia application**, click it and you are done **installing**.

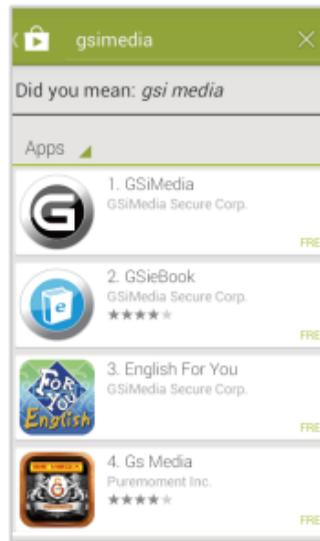

[1] Movie Playback

1-1 Main Menu

▶ Step 1


Open GSIPlayer will show the main menu of media playback. **Tap on window will hide the control panel**, tap it again will display it again.



Playlist Interfaces

▶ Step 2

Click on **[Playlist]** button, then display the playlist in a window.

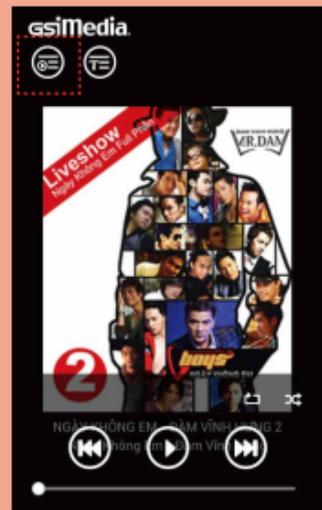


▶ Step 3

Please find your preferences files to get the content to actually play.




1-2 Features Introduction^{*Note 4}

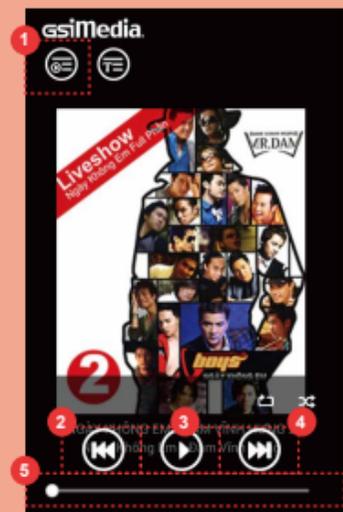

- 1 Playlist
- 2 Move to previous file
- 3 Play & Pause
- 4 Move to the next file
- 5 Timeline Slider

*Note 4: If Movie Control Panel closes. Tap on window again, will show control panel again.

Movie Playback Interface

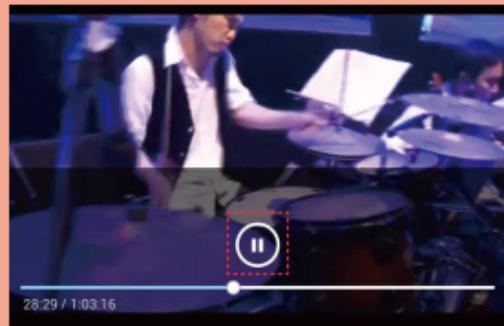

on your phone to return to main Movie window.

Movie Pause Interface




[Timeline Slider]
Drag the slider to move along the movie's timeline

[2] Music Playback

2-1 Main Menu

▶ Step 1

Open GSIPlayer will show the main menu of media playback. **Tap on window will hide the control panel**, tap it again will display it again.

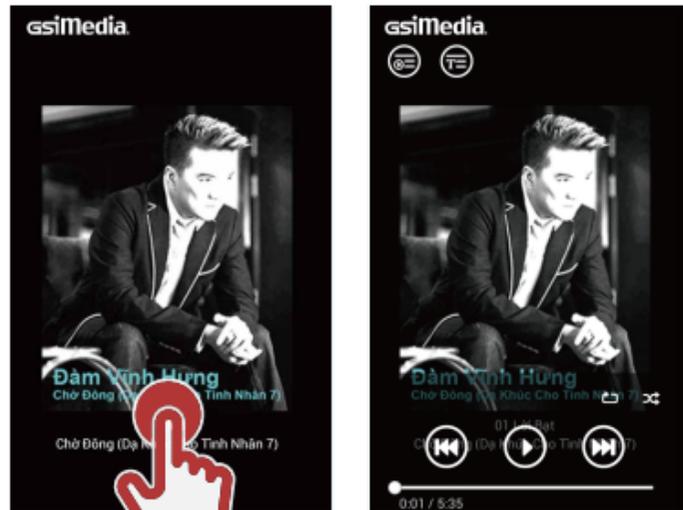

Playlist Interfaces

▶ Step 2

Click on **[Playlist]** button, then display the playlist in a window.




▶ Step 3

Please find your preferences files to get the content to actually play.



2-2 User Interfaces Features

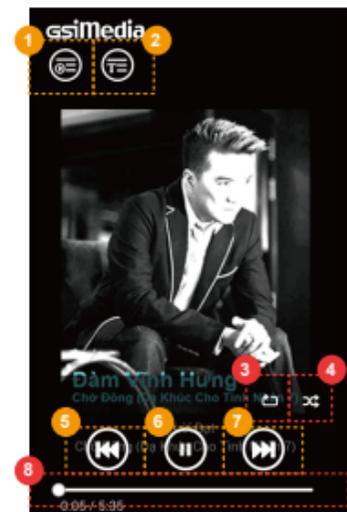

- 1 Playlist
- 2 Lyric
- 3 Play Modes : Repeat / Once / Loop A Single Track
- 4 Shuffle Toggle : On / Off
- 5 Move to previous file*Note 5
- 6 Play & Pause
- 7 Move to the next file*Note 5
- 8 Timeline Slider

Note 5: Slides from left to right : Move to previous or next

Music Playback Features : Play Modes



Playlist Repeat Toggle

The playlist will be played in its entirety in a loop



Playlist Play Once

played once.



Loop A Single Track

The playlist will be played in a loop.

Music Playback Features : Shuffle Toggle



Shuffle Toggle : On

When the Shuffle Toggle is on, files on the playlist will be played in a random order.



Shuffle Toggle : Off

When the Shuffle Toggle is off, files on the playlist will be played in a alphabetical order.

Open Music Lyric Mode

▶ Step 1

Open Music lyric button will show lyrics playing in time with the music in a control panel window. Tap on window will hide the control panel, tap it again will display it again. Close Music lyric button will return to main Music menu.

▶ Step 2




[3] Open and play Karaoke Files

3-1 Main Menu

▶ Step 1


Open GSIPlayer will show the main menu of media playback. **Tap on window will hide the control panel**, tap it again will display it again.

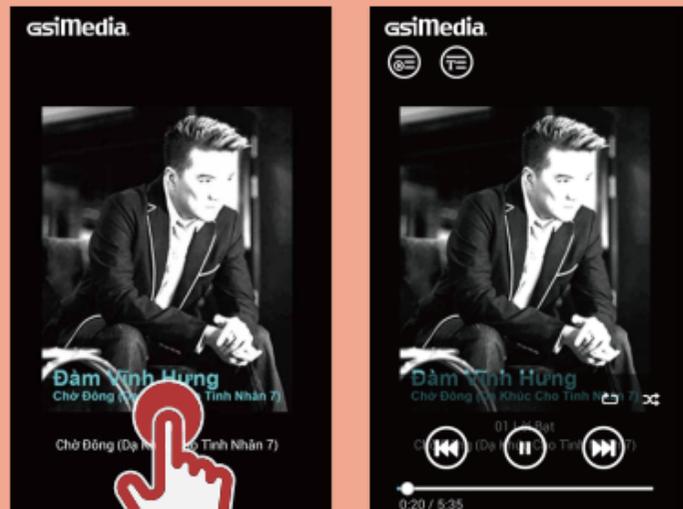

Playlist Interfaces

▶ Step 2

Click on **[Playlist]** button, then display the playlist in a window.

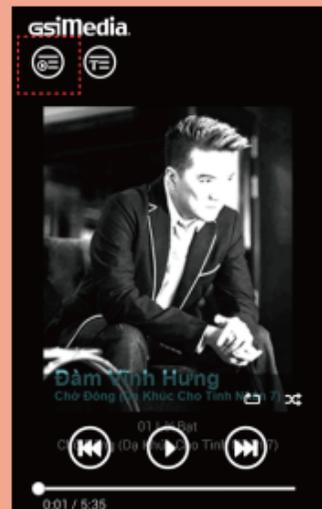


▶ Step 3

Please find your preferences files to get the content to actually play.



3-2 User Interfaces Features

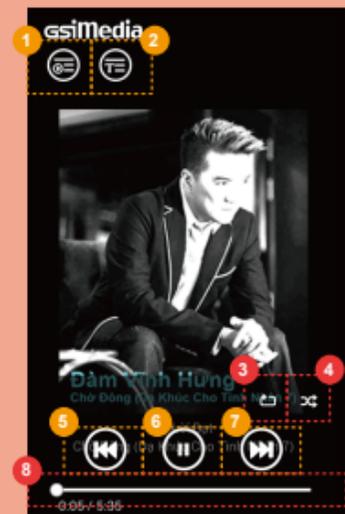

- 1 Playlist
- 2 Lyric
- 3 Play Modes : Repeat / Once / Loop A Single Track
- 4 Shuffle Toggle : On / Off
- 5 Move to previous file^{*Note 6}
- 6 Play & Pause
- 7 Move to the next file^{*Note 6}
- 8 Timeline Slider

Note 6: Slides from left to right : Move to previous or next

Karaoke Playback Features : Play Modes



Playlist Repeat Toggle

The playlist will be played in its entirety in a loop


Playlist Play Once

played once.

Loop A Single Track

The playlist will be played in a loop.

Karaoke Playback Features : Shuffle Toggle

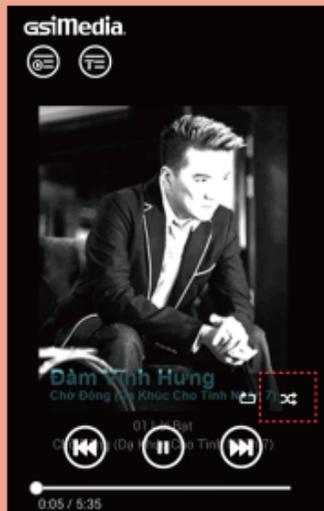

Shuffle Toggle : On

When the Shuffle Toggle is on, files on the playlist will be played in a random order.



Shuffle Toggle : Off

When the Shuffle Toggle is off, files on the playlist will be played in a alphabetical order.

Open Karaoke Lyric Mode

▶ Step 1

▶ Step 2


Lyric mode will show lyrics playing in time with the music. And will display different background pictures at different times. Press return button will return to main Karaoke menu.



Lyric Mode in Landscape View



Lyric Mode : Open Landscape View

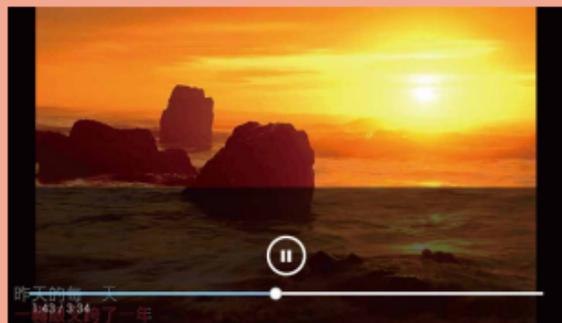

gsimedia